

Зип Общепит
vsezip.ru
+7(812)987-08-81




BRPR218

Edition 20040907-

Зип Оффенит

vsezip.ru

+7(812)987-08-81

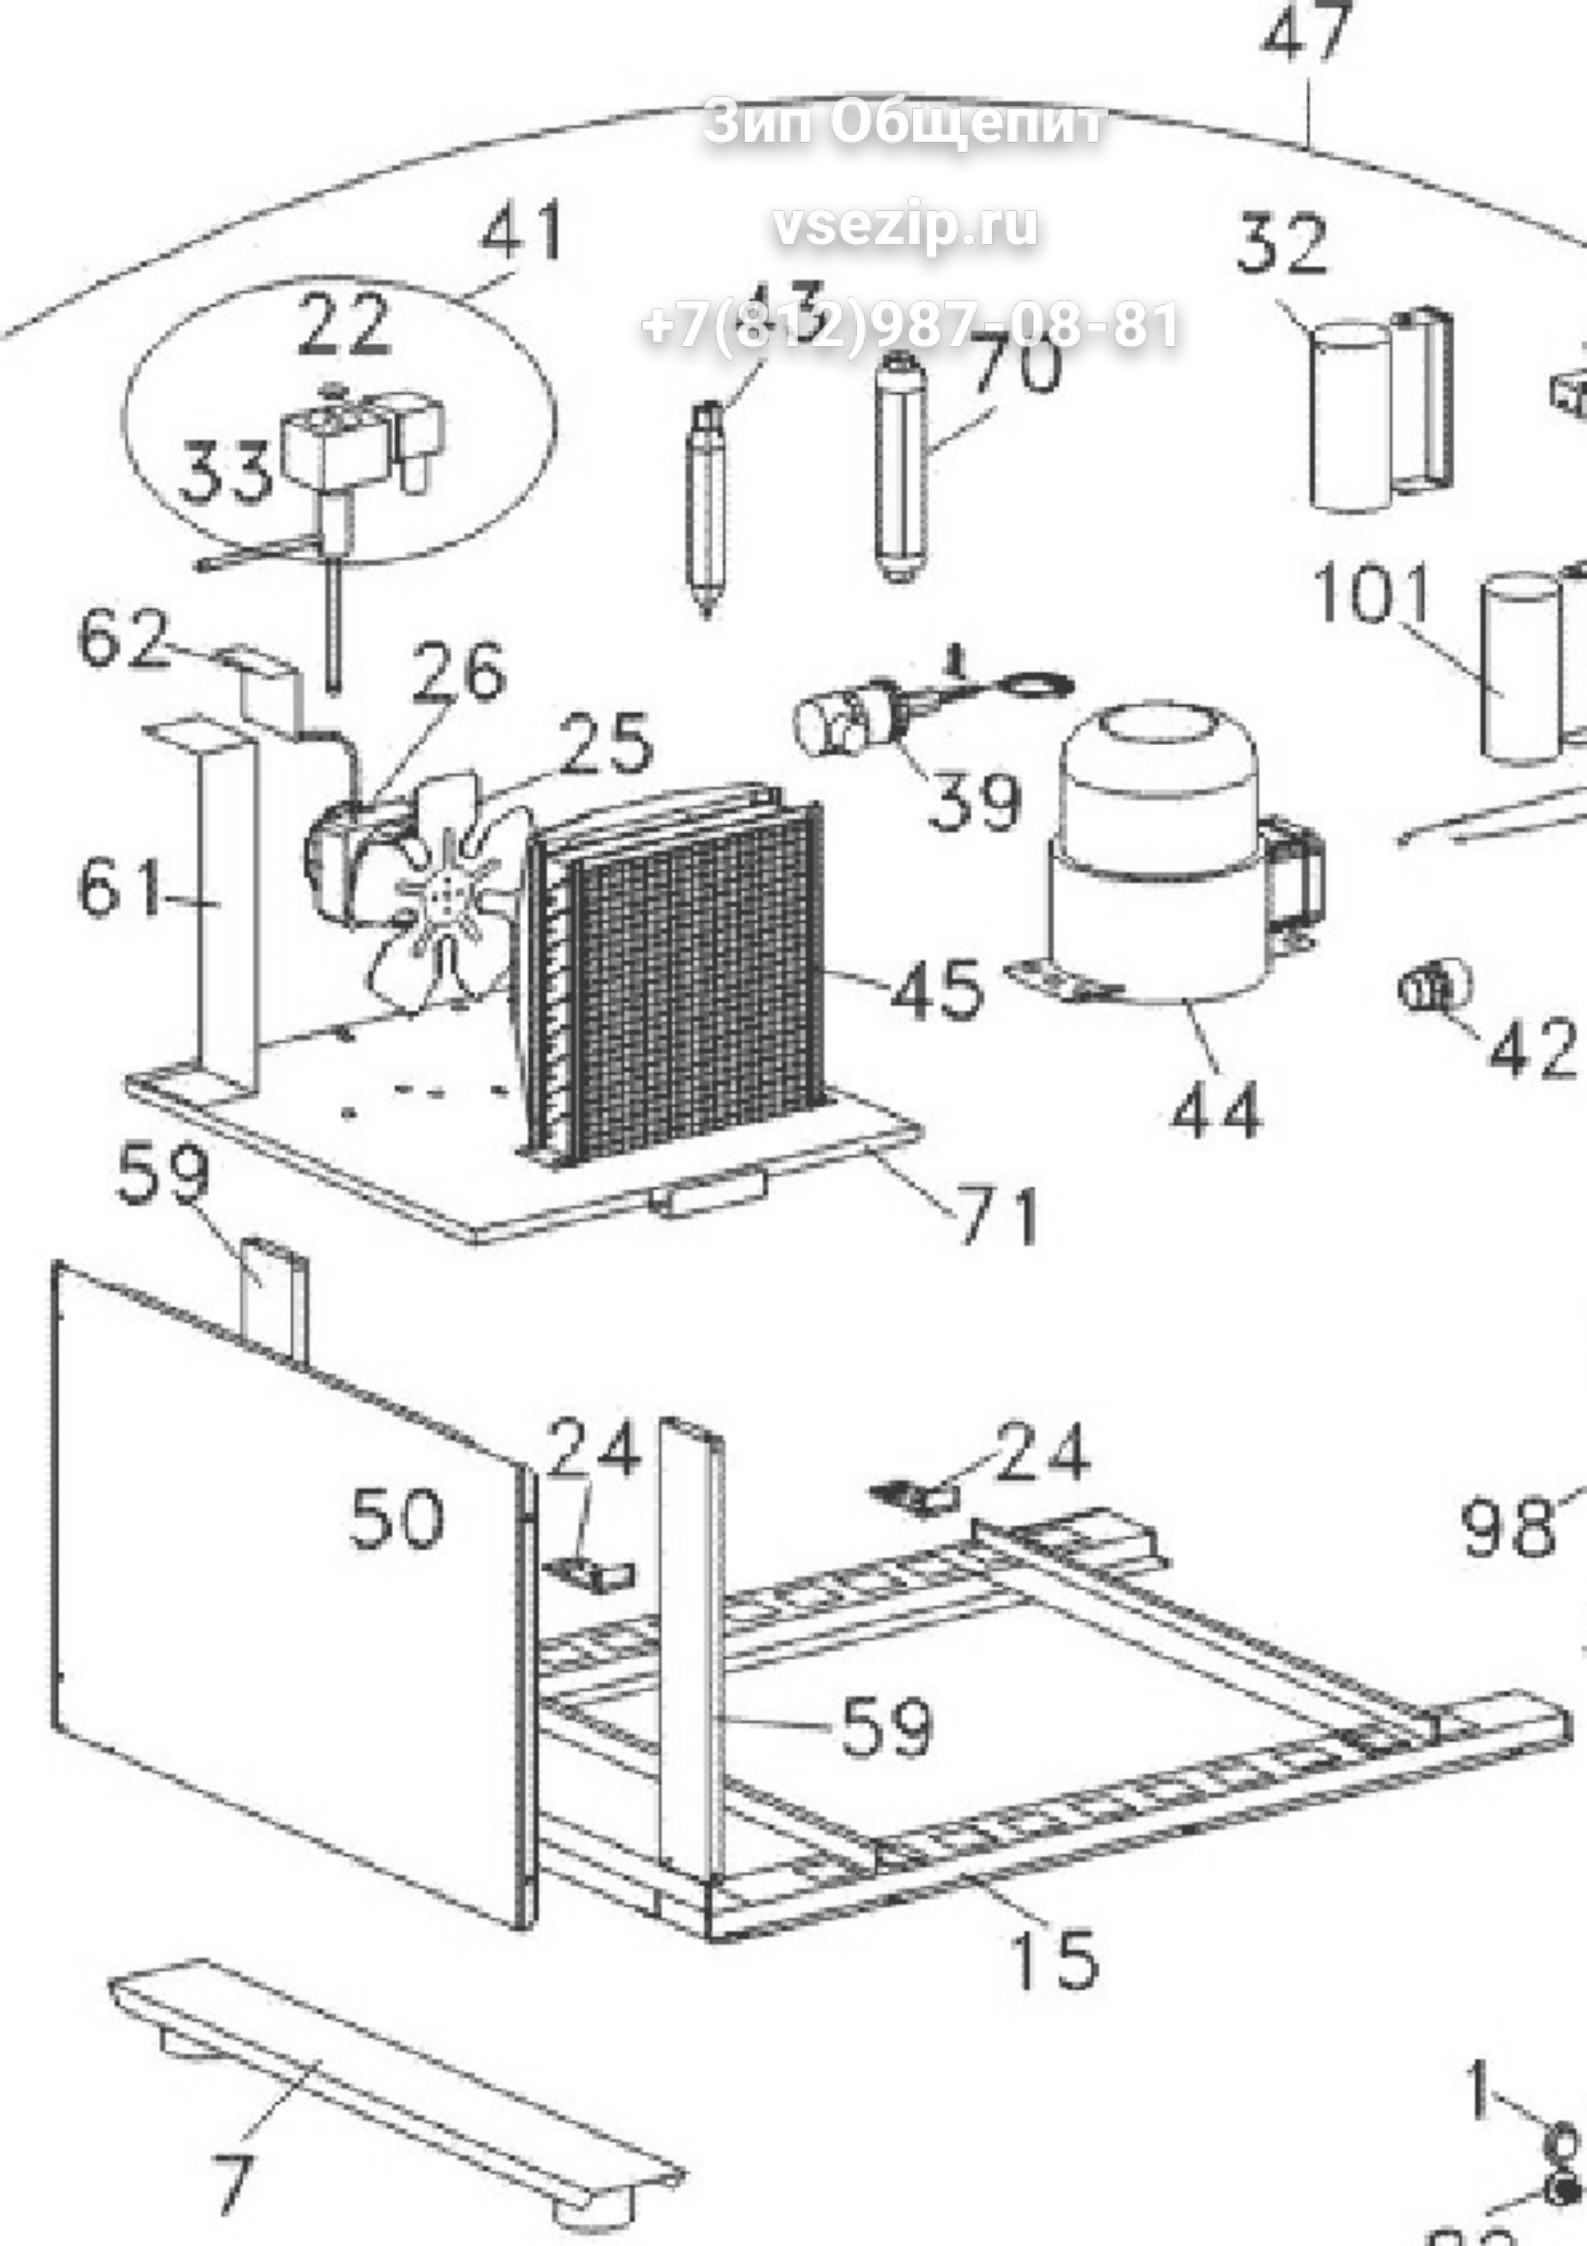

Pos	Code	Description	Info
001	3178350	PLUG	01/01/1996-
002	3190720	RH SPACER	01/01/1996-
003	3190730	LH SPACER	01/01/1996-
004	3600260	FALSE BOTTOM	01/01/1996-
005	30A2620	CONTROL PANEL	01/01/1996-
006	30G3970	DOOR ASS. Y	30/06/2000-
007	30T2571	FOOT HOUSING ASS. Y	01/01/1996-
008	30T5160	TOP BRACKET	01/01/1996-
009	30T6370	UPPER CROSS MEMBER	01/01/1996-
010	30T6360	RISER	01/01/1996-
011	30T5400	BOTTOM BRACKET	01/01/1996-
012	30T6400	UPPER CROSS MEMBER	01/01/1996-
013	30T6410	LOWER CROSS MEMBER	01/01/1996-
014	30T5550	INSTR.BD PROT.	01/01/1996-
015	30T6420	FRAME	01/01/1996-
016	30W3150	COLD ROOM ASS.Y	01/01/1996-
017	30W3230	WELL TOP	01/01/1996-
018	32D0020	CABLE CLAMP Ø 4 - 12	01/01/1996-
019	32D0220	CABLE CLAMP Ø 16	01/01/1996-
020	32D0680	CABLE CLAMP	01/01/1996-
021	32D0690	TERMINAL BOARD	01/01/1996-
022	32D0710	THREE-POLE	01/01/1996-
023	32M5920	CONNECTOR TANGENTIAL FAN	23/11/1998-
024	35B5090	PANEL SUPPORT	01/01/1996-
025	32M2260	FAN	01/01/1996-
026	32M6870	FAN MOTOR	05/12/2001-
027	32W0790	ORANGE LIGHT 230V	01/01/1996-
028	32W2990	LIGHT SWITCH	01/01/1996-
029	32X0120	GROMMET Ø 21	01/01/1996-
030	32X0140	GROMMET Ø13,5-Ø25	01/01/1996-
031	32X0230	GROMMET	01/01/1996-
032	32Z9710	CONDENSER	22/09/1999-
033	32Z2750	COIL	01/01/1996-
034	32Z3470	TRANSFORMER	01/01/1996-
035	32V0370	ENGINE CUTO	22/09/1999-
036	32V0330	RELAY	22/09/1999-
037	32Z0120	THERMOMETER	01/01/1996-
038	32Z6000	STRAY.CONDENS.	01/01/1996-
039	32Z5890	PRESSURE-SW	22/09/1999-
040	32Z6360	THERMOSTAT	01/01/1996-
041	33A0510	DEFROST SOL. VALVE	01/01/1996-
042	33A1200	AUXIL.VALVE	01/01/1996-
043	33A0180	FILTER	01/01/1996-
044	34D5920	COMPRESSOR	22/09/1999-
045	34D0720	CONDENSER	01/01/1996-
046	34D8420	EVAP.GROUP	22/09/1999-
047	34D8390	MOTOR UNIT	22/09/1999-
048	35B8110	COUNTERPAN.	01/01/1996-
049	35B5760	SHELF SEPAR.PAN.	01/01/1996-
050	35B6150	MOTOR ROOM PAN.	01/01/1996-
051	30Q2530	EVAP. RH GUARD	01/01/1996-

Pos	Code	Description	Info
052	35G5990	COUNTERDOOR	01/01/1996-
053	35G6120	IST.BOARD COVER	01/01/1996-
054	30T6360	RISER	01/01/1996-
055	35Q8040	INSTR.BOARD PANEL	01/01/1996-
056	35S6261	GUIDE	11/10/1996-
057	35S7150	"Z" PANEL	01/01/1996-
058	35V4160	"L" PANEL	01/01/1996-
059	35S7220	MOTOR ROOM RISER	01/01/1996-
060	35S7740	RH RACK	01/01/1996-
061	35S8110	SOLENOID VALVE SUPPORT	01/01/1996-
062	35S8120	SOLENOID VALVE SUP.	01/01/1996-
063	35S8770	TRAY GUIDE	01/01/1996-
064	35S9370	INSTR.BOARD CLAMP	01/01/1996-
065	35V5680	FAN SUPPORT	01/01/1996-
066	35U4810	RISER CLAMP	01/01/1996-
067	30T6350	RISER "154"	01/01/1996-
068	37Q7700	GASKET "399"	01/01/1996-
069	35V3670	INSTR.BOARD RISER	01/01/1996-
070	35W3620	FLUID TANK	01/01/1996-
071	35W4430	TRAY	01/01/1996-
072	36A2820	GRID	01/01/1996-
073	36D3820	PLUG	01/01/1996-
074	36E4780	CONDENS. DRAIN	07/09/2004-
076	36C3940	ST-STEEL FO	22/07/1999-
077	36G2810	BEARING	01/01/1996-
078	36M2800	KNOB PLATE	01/01/1996-
079	36M4810	HANDLE	01/01/1996-
080	36M5310	HANDLE	01/01/1996-
081	36Q1200	PLUG	01/01/1996-
082	36Q1240	PLUG	01/01/1996-
083	36Z0300	COND. TRAY	01/01/1996-
084	37Q3320	DOOR GASKET	01/01/1996-
085	37Q7710	PANEL GASKET	01/01/1996-
086	3AA1060	PANEL BOARD	01/01/1996-
087	6010810	DOOR ASS.Y	30/06/2000-
088	6300375	PANEL UNIT	01/01/1996-
089	35G7450	COUNTERDOOR "399"	01/01/1996-
090	35S7730	LH RACK	12/01/2001-
091	35S7720	BACK RACK	01/01/1996-
092	35C0420	LEFT EVAP. GUARD	01/01/1996-
093	30T6390	LH BOTTOM BRACKET	01/01/1996-
094	30T0600	CENTR. FOOT-HOLDER	01/01/1996-
095	6010800	DOOR ASS.Y	30/06/2000-
096	36A2430	"GRID ""525""	01/01/1996-
097	30G3980	DOOR ASSEMBLY "399"	30/06/2000-
098	35V6290	TRIM	01/01/1996-
099	35X0830	DRAIN	01/01/1996-
100	32Q2910	CABLE ASS.Y	01/01/1996-
101	32Z9580	CONDENSER	22/09/1999-