

Зип Общепит
vsezip.ru
+7(812)987-08-81




70СР

Edition 20110101-

Зип Ощепит

vsezip.ru

+7(812)987-08-81

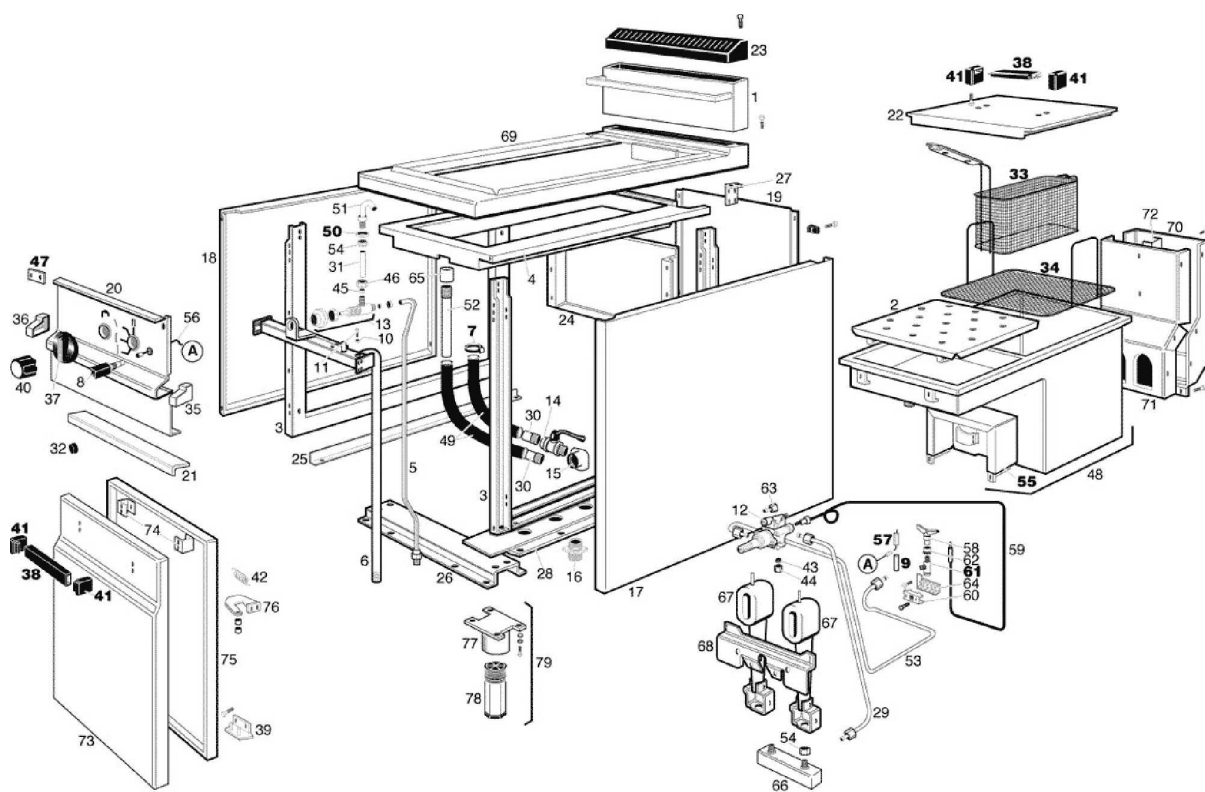

Pos	Code	Description	In o
001	30D1592	EXT. FLUE ASS. Y	01/11/1995-
002	30M1791	FALSE BOTTOM ASS. Y	01/11/1995-
003	30T1730	SIDE FRAME ASS. Y	01/11/1995-
004	30T2460	FRAME ASS. Y	01/11/1995-
006	30Z1710	GAS MANIFOLD ASS. Y	01/11/1995-
007	3140300	HOSE CLAMP	01/11/1995-
008	32T0130	PIEZO IGNITION	01/11/1995-
009	131AA46	HOSE 8'X40	01/11/1995-
010	3128460	WASHER	01/11/1995-
011	31A7380	SCREW TE M5X10	01/11/1995-
012	33A1040	GAS CONTROL	01/11/1995-
013	33D0590	"COCK 3/8""	01/11/1995-
014	33D1740	COCK MF	01/11/1995-
015	33Q2880	SIDE OUTLET ELBOW	01/11/1995-
016	33Q5730	NIPPLE ASS. Y	01/11/1995-
017	35A8110	RH PANEL	01/11/1995-
018	35A8120	LH PANEL	01/11/1995-
019	35A9220	REAR PANEL	01/11/1995-
020	35B9410	UPPER CONTROL BOARD	01/11/1995-
021	35S5740	BRACKET	01/11/1995-
022	35G2810	WELL LID	01/11/1995-
023	35Q5680	FLUE GUARD	01/11/1995-
024	35Q6100	REAR GUARD PANEL	01/11/1995-
025	35U3480	"L" BRACKET	01/11/1995-
026	35U4580	"OMEGA" BRACKET	01/11/1995-
027	35U7140	"L" BRACKET	01/11/1995-
028	35U8022	GAS CROSS MEMBER	01/11/1995-
029	35X0971	BURNER PIPE	01/11/1995-
030	35Z3490	SPACER PIPE	01/11/1995-
032	36D6860	FOOT	01/11/1995-
033	36A2582	PASTA BASKET	01/11/1995-
034	36A2591	BOTTOM NET	01/11/1995-
035	36D3420	RH END SIDE	01/11/1995-
036	36D3430	LH END SIDE	01/11/1995-
037	36M2390	GAS CONTROL KNOB	01/11/1995-
038	36M2471	HANDLE	01/11/1995-
039	36M2500	RH LOWER HINGE ASS. Y	01/11/1995-
040	36M2642	RED RING KNOB	01/01/2011-
041	36M2910	TERMINAL	01/11/1995-
042	36G5240	SPRING	01/11/1995-
043	36Q0030	BICONE Ø12X8	01/11/1995-
044	36Q0050	BICONE NUT Ø 12	01/11/1995-
045	36Q0080	BICONE Ø 10X6.5	01/11/1995-
046	36Q0140	BICONE NUT Ø 10	01/11/1995-
047	35T9650	FLAT BRACKET	01/11/1995-
048	6004290	WELL KIT ASS. Y	01/11/1995-
049	33M0800	PIPE	01/11/1995-
050	37Q1210	"O" RING Ø 18.77"	01/11/1995-
051	33Q2730	WATER SPOUT	01/11/1995-
052	35Z6560	"PIPE Ø 1""X280"	01/11/1995-
053	35X1000	PILOT LIGHT PIPE	01/11/1995-

Pos	Code	Description	In o
054	36Q1110	LOCK NUT 3/8"	01/11/1995-
055	35Q4442	BURNER HOUSING	01/11/1995-
056	32A0210	CABLE "HF" 700MM	01/11/1995-
057	32T0010	IGNITION PLUG	01/11/1995-
058	32Z2241	2 FLAMES BURNER	01/11/1995-
059	33A0520	THERMOCOUPLE	01/11/1995-
060	33A0950	REAR BRACKET	01/11/1995-
061	33A2900	PILOT BURNER BODY	01/11/1995-
062	33A0970	RING NUT	01/11/1995-
063	32Z1460	VALVE MAGNET	01/11/1995-
064	35S5080	SUPPORT	01/11/1995-
065	33Q2260	SOCKET F 1"	01/11/1995-
066	30Z7531	GAS MANIFOLD	01/12/1997-
067	34A1670	VERTICAL BURNER	01/11/1995-
068	35S5540	BURNER SUPPORT	01/11/1995-
069	30M1780	TOP ASS. Y	01/11/1995-
070	35D4810	FLUE BACK PLATE	01/11/1995-
071	35D4820	FLUE FRONT PANEL	01/11/1995-
072	35U8210	"U" BRACKET	01/11/1995-
073	35G1920	DOOR	01/11/1995-
074	35U3150	""C"" BRACKET"	01/11/1995-
075	3AG0140	RH INNER DOOR FRAME ASS. Y	01/11/1995-
076	36M2541	RH UPPER HINGE	01/11/1995-
077	36D9360	FOOT HOUSING ASS. Y	01/11/1995-
078	36D9350	STAINLESS STEEL FOOT	01/11/1995-
079	36D9340	STAINLESS STEEL FOOT ASS.Y	01/11/1995-
080	35X3920	LH PIPE	25/03/1997-
081	30Z1980	WATER PIPE ASS. Y	25/03/1997-