



+7(812)987-08-81

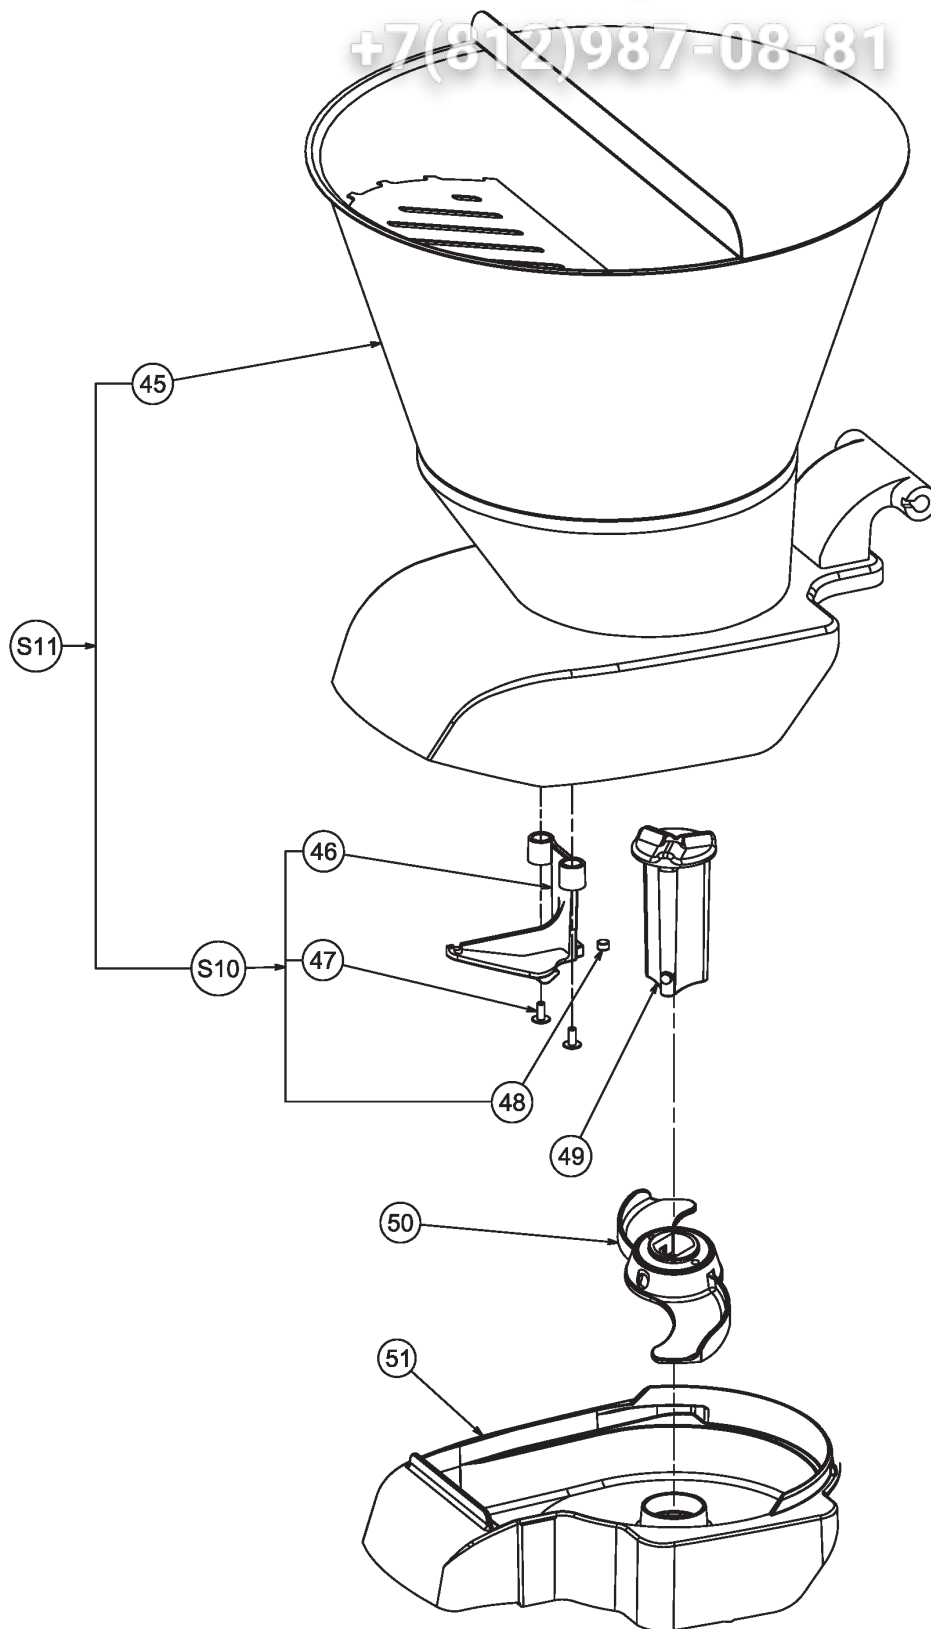


Model	All									
Table	SPTR210		Page	2	Hopper exploded view					
Pos.	Spare Part	Alias Code	Repl. by	S	Info	Kit	Techn. Bulletin	Description	Notes	
0045	000000								See S11	
0046	000000								See S10	
0047	0U0666							SCREW; 10 PCS		
0048	000000								See S10	
0049	0D7679				D			AGITATOR; TR120		
0050	0D5554			S				EJECTOR PLATE; STD TRK2		
0051	0D5562		0D8020	S				CHAMBRE; COUPE EQ TRK2		
0S10	0D5561			S				HANDLE; EQ TRK2		
0S11	0D7680		0D8009					COMPLETE AUTOMATIC HOPPER		

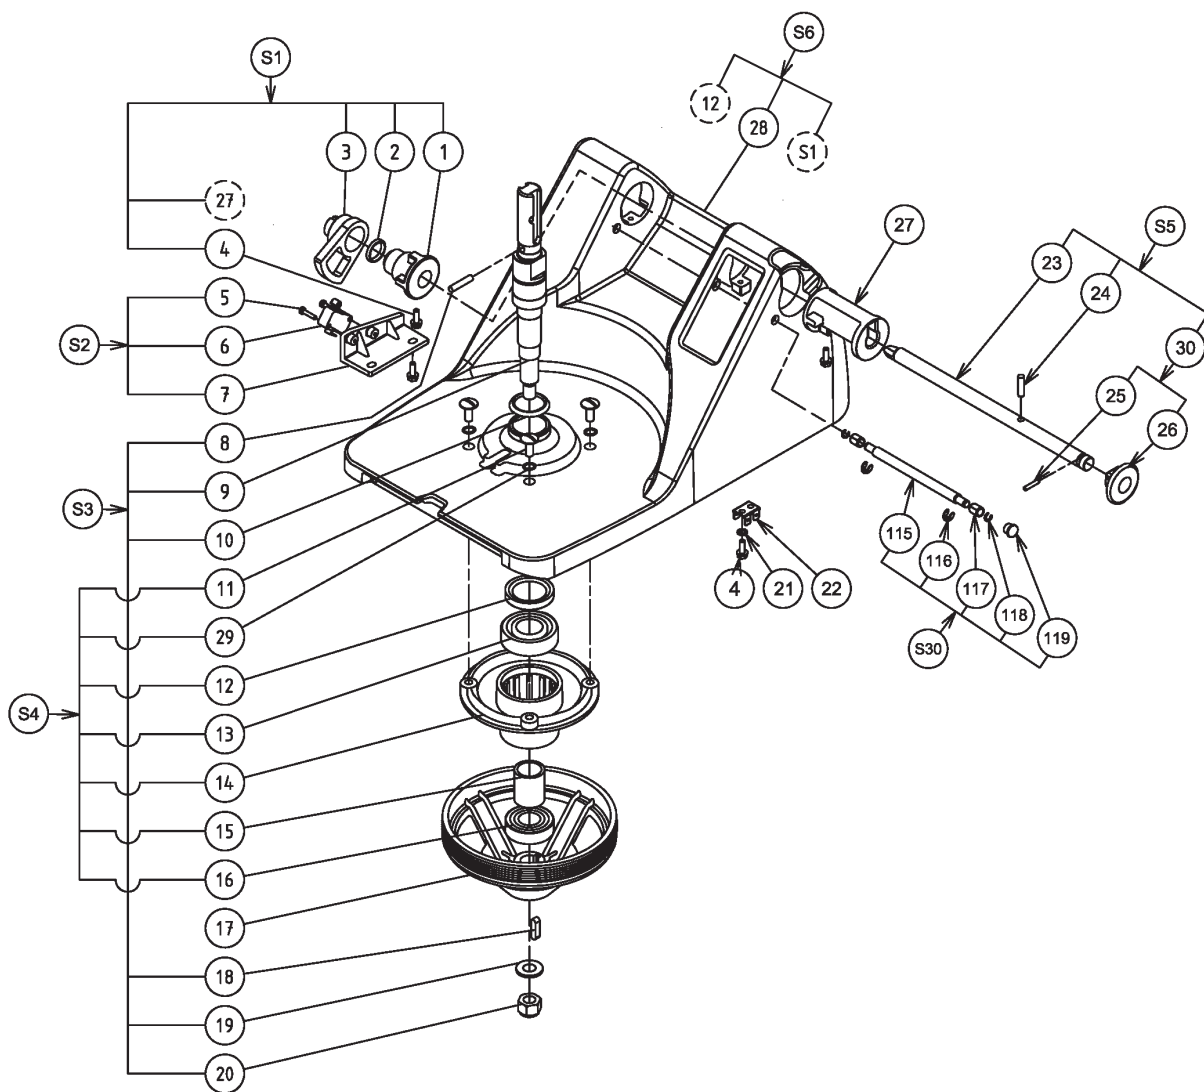

Model	All									
Table	SPTR210		Page	4		Body exploded view				
Pos.	Spare Part	Alias Code	Repl. by	S	Info	Kit	Techn. Bulletin	Description	Notes	
0001	0D5412							DOOR HANDLE		
0002	0D2662							O-RING; 15.54X2.62 (1.25 X 5)		
0003	0D5413							CAM; TRK2		
0004	0D6754				D			SCREW; M4X12 INOX (JX10)		
0005	0D5414							SCREW; PT WN 1412 K30/16 (JX10)		
0006	0D6620			S				MICROSWITCH; TRK2		
0007	0D5415							SUPPORT; RUPTER TRK2		
0008	0D7860			S				SPRING COTTER; G06 5X25; SET 10PCS		
0009	000000								See S3	
0010	0D5419			S				DEFLECTOR; TRK2		
0011	0U0237							SCREW; 10 PCS		
0012	0D5534							GASKET; 28X40X7 (JEU X5)		
0013	0KQ395			S	A			BEARING; 6204 2RS		
0014	000000								See S4	
0015	0D5596							SPACER; 20X25X30 TRK2		
0016	0KJ007			S	A			BALL BEARING; 6203 2 RS		
0017	0D2093							POULIE RECEPTRICE TRS		
0018	0HD008							KEY; 5 PCS		
0019	0D5597							WASHER; M10X22X2 INOX (JX10)		
0020	0U0651							SELF-LOCK NUT; M10, 10 PCS		
0021	0D0520							PIN; 10 PCS		
0022	0D3567				D			BRASS EARTH TERMINAL (SET X5)		
0023	000000								See S5	
0024	0D0396			S				PIN; 10 PCS		
0025	0KQ479			S				PEG; 10 PCS		
0026	0D5427		0D7492					PUSH BUTTON; TRK2		
0027	0D5428							GUIDE; TRK2		
0028	0D5429							CORPS; STD USINE TRK2		
0029	0D5144							O-RING; 5.7*1.9; 5 PCS		
0030	0D7492			S				BUTTON ASSEMBLY		
00S1	0D5430							DOOR HANDLE; GUIDE COMPLET TRK2		
00S2	0D5431			S				SUPPORT; RUPTEUR EQ TRK2		
00S3	0D7681							SHAFT; TR120		
00S4	0D5570			S				BEARING HOUSING ASSEMBLY; EQ TR2S		
00S5	0D5432			S				LOCKING BAR ASSEMBLY; EQ TRK2		
00S6	0D5433							CORPS; EQ TRK2		

Model		All							
Table		SPTR210		Page	4	Body exploded view			
Pos.	Spare Part	Alias Code	Repl. by	S	Info	Kit	Techn. Bulletin	Description	Notes
0115	000000								See S30
0116	0D7859							SNAP RING; 6E; SET 10PCS	
0117	0D7857							BEARING; 6X8X10; SET 10PCS	
0118	0D7858							SNAP RING; 6E; SET 10PCS	
0119	0D3043							PLUG (SET X10)	
0S30	0D7856							ROTATIVE TILTING BAR; KIT; TR2S	

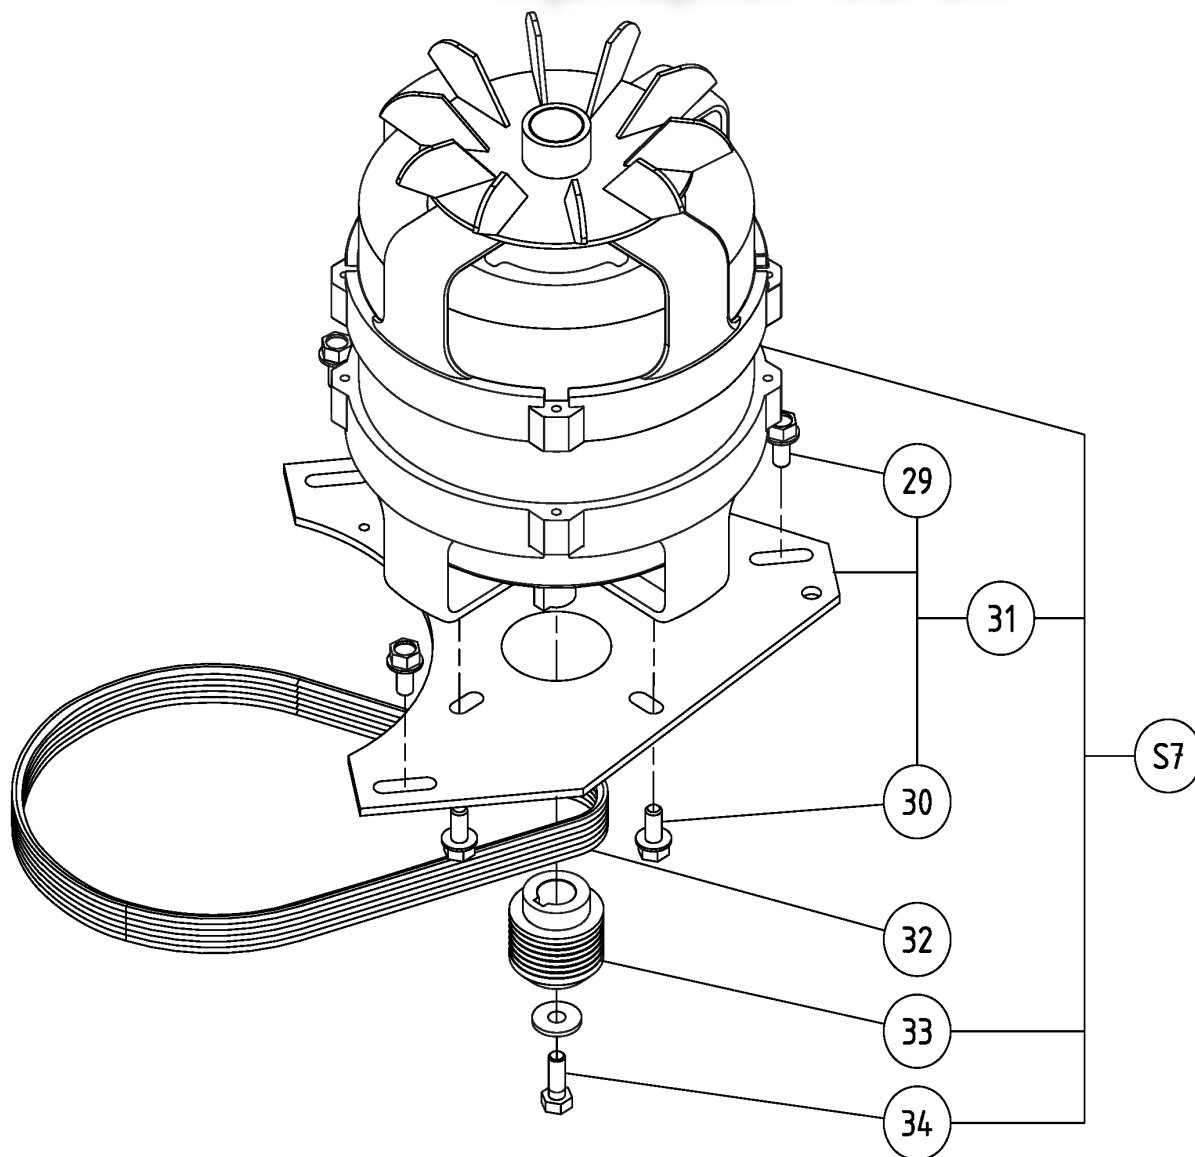


Model	All									
Table	SPTR210		Page	6	Motor exploded view					
Pos.	Spare Part	Alias Code	Repl. by	S	Info	Kit	Techn. Bulletin	Description	Notes	
0029	0D6708				D			SCREW; TAPTITE M6X16 (JEU X10)		
0030	0D0594							SCREW; 10 PCS		
0031	0D5598							SUPPORT; MOTOR EQ TRK2		
0032	033106			S	A			BELT; POLY V 559 J6		
0033	0KQ336							LAMP		
0034	000000									
00S7	0D5588							MOTOR; MONO 1V 500W EQ TR2S		
00S7	0D5590							MOTOR; 3 400 50 2V EQ TR2S		
00S7	0D5591							MOTOR; MONO VV EQ TR2S		


Зип Общепит

Vue éclatée Caisson / Casing exploded view / Explosionszeichnung
Gehäuse/ Esploso Cassone / Despiece Carcasa / Sprängskiss Behållare

+7(812)987-08-81

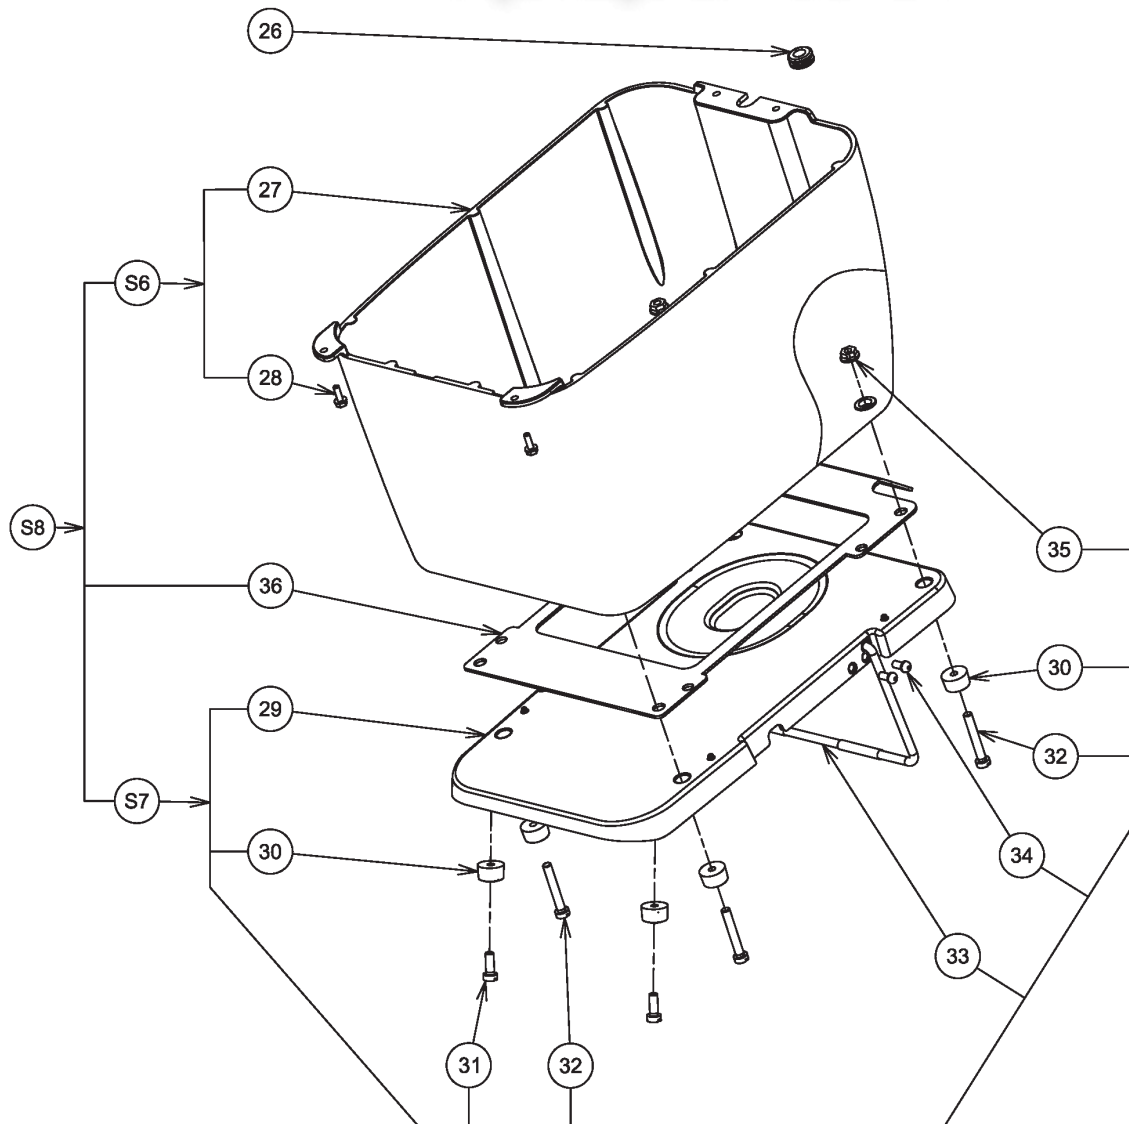

Vue éclatée Commande-Platine TR 1V mono / Exploded view TR 1-sp. single phase circuit board-Control / Explosionszeichnung Steuerung-Platine TR 1 GS WS / Esploso Comando Piastra TR 1V mono / Despiece Mando-Platina TR 1V mono / Sprängskiss- Kontroll-TR-Platin 1V en

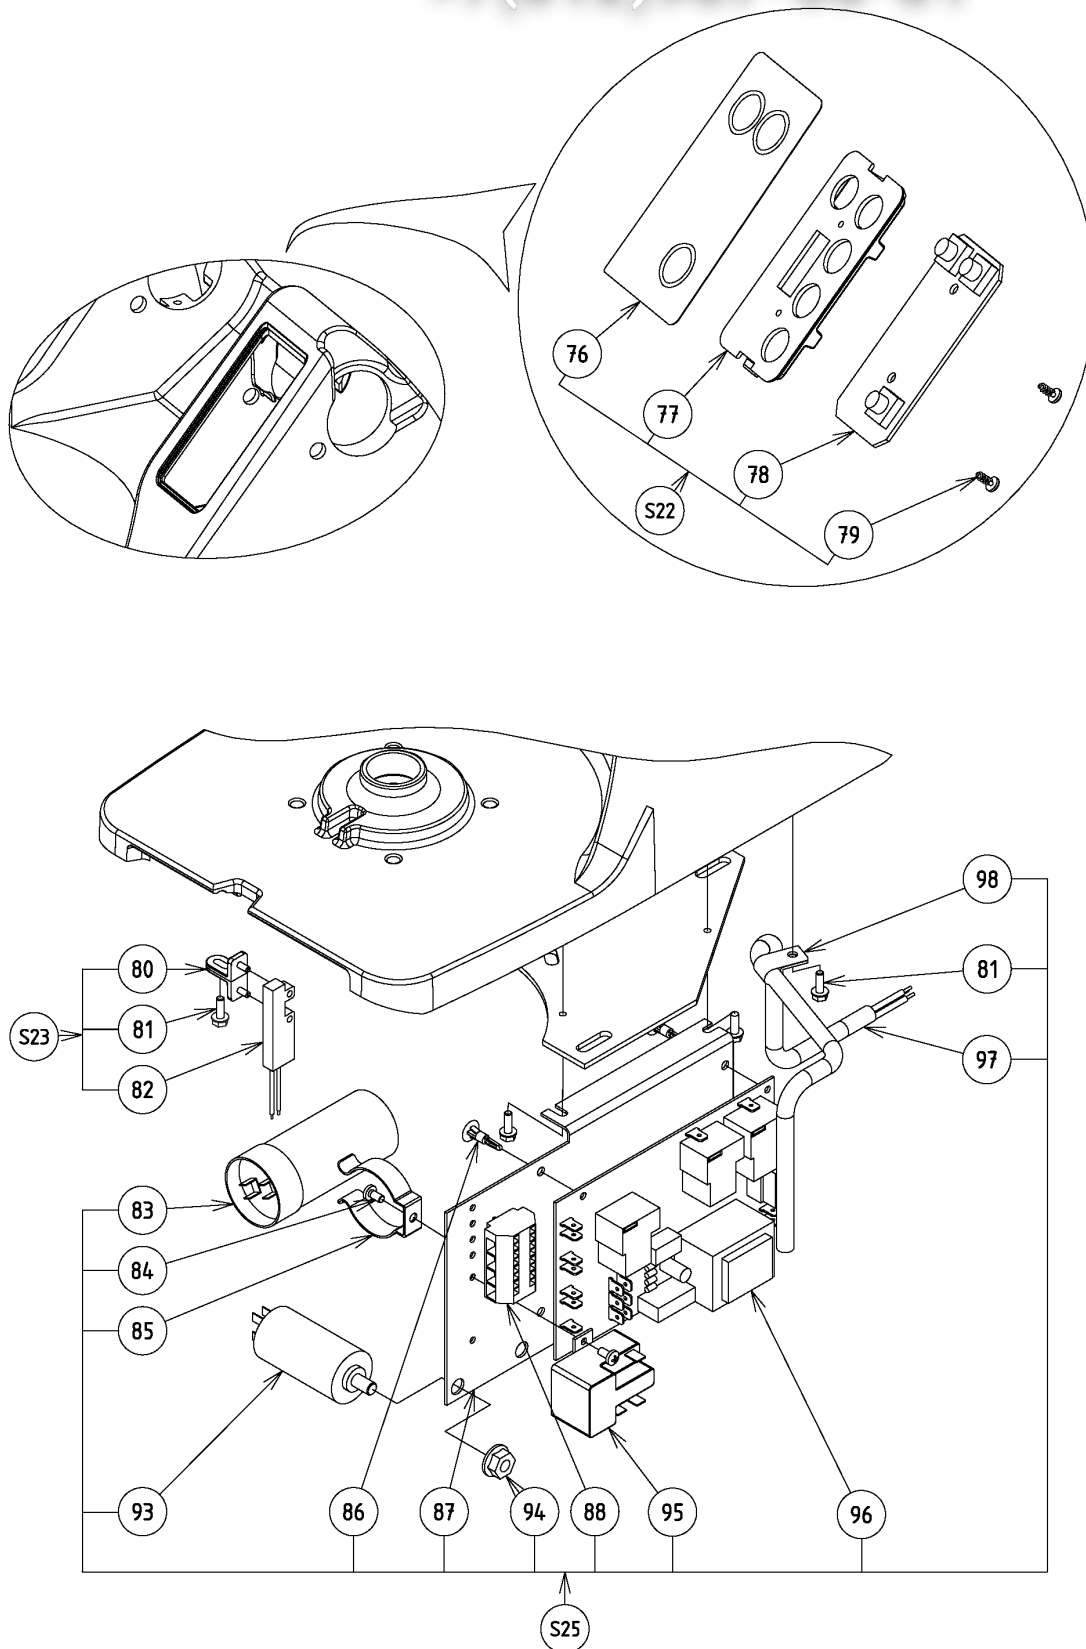




Model	All								
Table	SPTR210		Page	12		Exploded view TR 2-sp threeph. Circuit board-Control			
Pos.	Spare Part	Alias Code	Repl. by	S	Info	Kit	Techn. Bulletin	Description	Notes
0058	0D7684				D			ADHESIVE MEMBRANE; 2 SPEED; ELUX	
0058	0D7692				D			ADHESIVE MEMBRANE; 2 SPEED; DITO	
0059	0D5515							SUPPORT; CARD CDE TRK2	
0060	000000								S18
0061	0D2918							SCREW PT WN 1442 K30/8 (SET X10)	
0062	0D5517							SUPPORT; SECURITE TRK2	
0063	0D6754				D			SCREW; M4X12 INOX (JX10)	
0064	0D6626			S				SENSOR; TRK2	
0065	0D2848							PRINTED CIRCUIT FIXING SPACER (SET X6)	
0066	0D5518				D			SUPPORT; COMPOSANT K CI	
0067	0D5679			S				POWER BOARD; 2V EQ TBX	
0068	0D6708				D			SCREW; TAPTITE M6X16 (JEU X10)	
0069	0KQ662			S	A			CONDENSER	
0070	0D3429				D			SCREW PLATE M4X8 GALVA STL SET X10	
0071	0U0242				D			HOLDER	
0072	0D5544				D			CABLE; ALIM TRI EQ TRK2	
0074	0D1708							COLLAR; ASS.	
0075	0D6441				K	Kit		SPACER; SET 10PCS; 4X10X10	
0075	0D6755					Kit		SCREW; SET 10PCS; M4X20	
0075	0D6756					Kit		NUT; PLASTIQUE M4; SET 10PCS	
0S18	0D7685				D			COMPLETE CONTROL CARD SUPPORT 2V; ELUX	
0S18	0D7693				D			COMPLETE CONTROL CARD SUPPORT; 2V; DITO	
0S19	0D5522							SUPPORT; PSA COMPLETE TRK2	
0S20	0D5572		0D8001					SUPPORT; TRI 2V TR2S	

Vue éclatée Commande-Variateur / Exploded view Variable speed unit-
Control / Explosionszeichnung Steuerung-Regelantrieb / Esploso Coman-
do-Variatore / Despiece Mando-Variador / Sprängskiss - Kontroll-Variator

+7(812)987-08-81

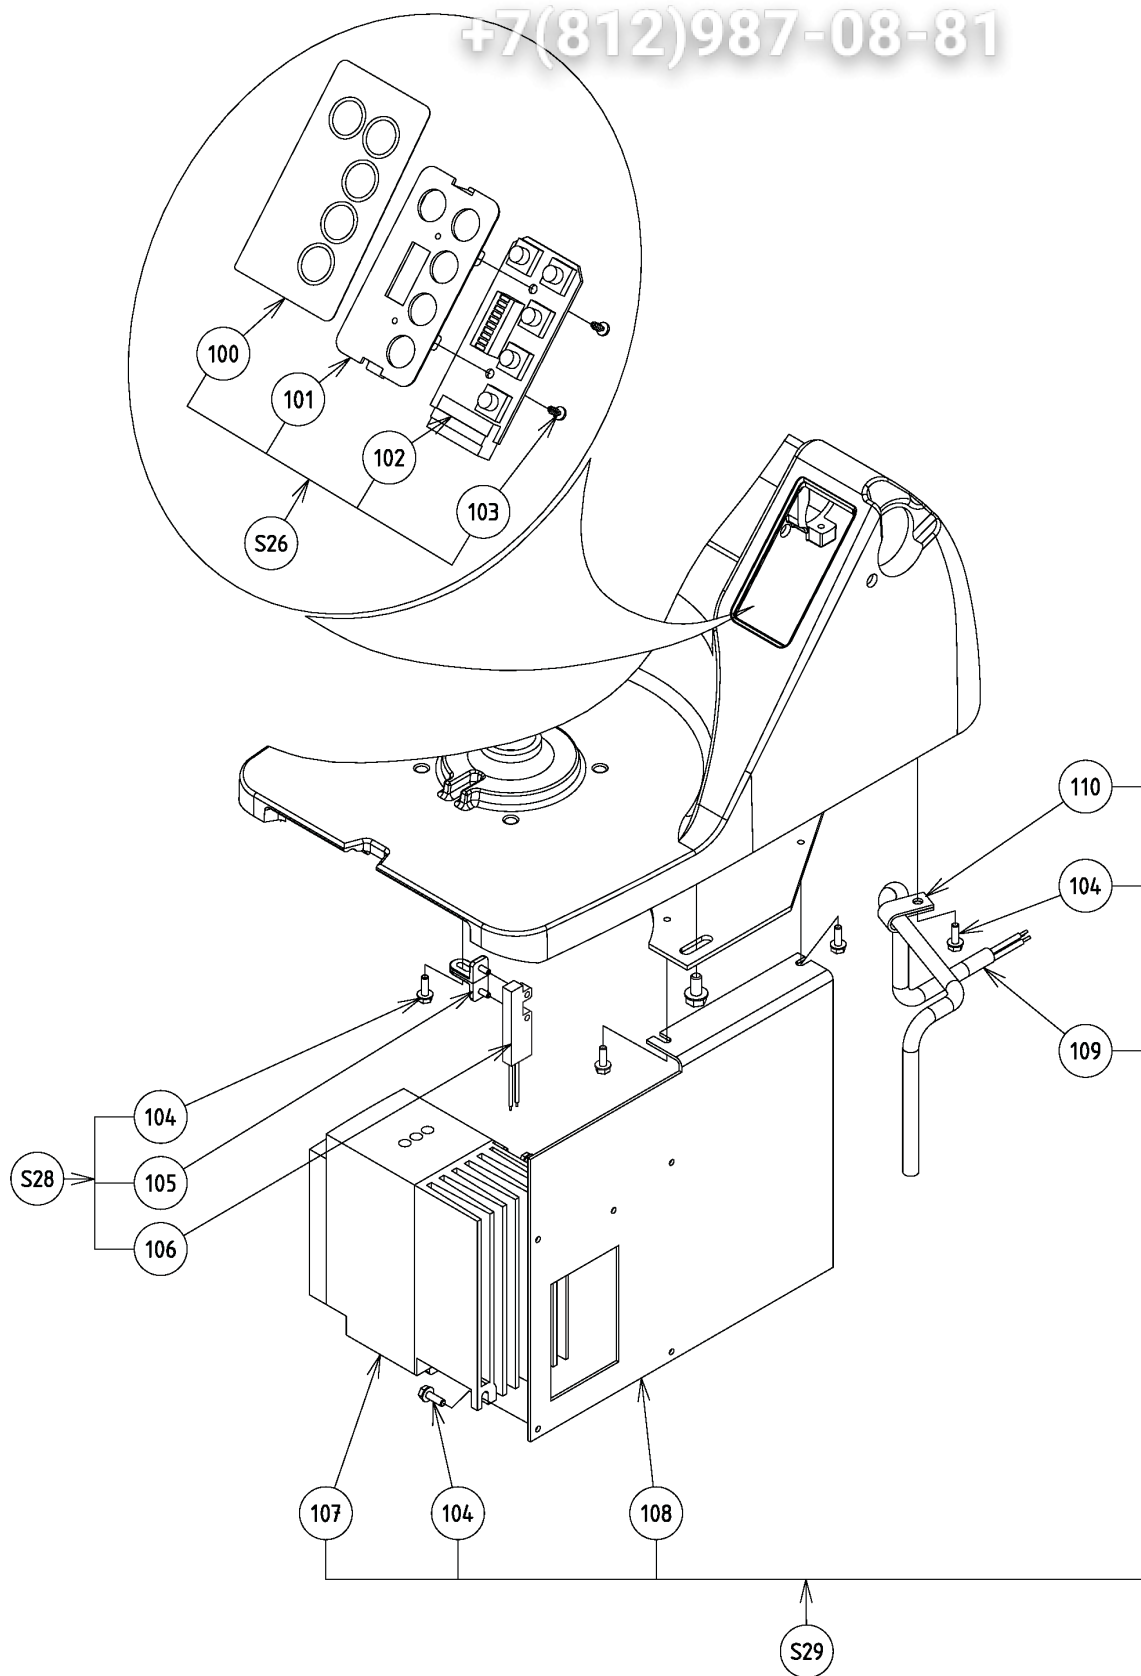

Pos.	Spare Part	Alias Code	Repl. by	S	Info	Kit	Techn. Bulletin	Description	Notes
0100	0D7687				D			ADHESIVE MEMBRANE; VARIABLE SPEED; ELUX	
0100	0D7694				D			ADHESIVE MEMBRANE; VARIABLE SPEED; DITO	
0101	0D5515							SUPPORT; CARD CDE TRK2	
0102	0D5546			S				CARD; COMMANDE P/M/A/+/- TRK	
0103	0D2918							SCREW PT WN 1442 K30/8 (SET X10)	
0104	0D6754				D			SCREW; M4X12 INOX (JX10)	
0105	0D5517							SUPPORT; SECURITE TRK2	
0106	0D6626			S				SENSOR; TRK2	
0107	0D6246							SPEED VARIATOR; REGLE TR2S	
0108	0D7689								
0109	0D5545			S				CABLE; ALIM MONO EQ TRK2	
0110	0D6040				K	Kit		CLIP; SET 10PCS	
0S26	0D7688				D			COMPLETE CONTROL CARD SUPPORT VV; ELUX	
0S26	0D7695				D			COMPLETE CONTROL CARD SUPPORT; VV; DITO	
0S28	0D5542							SUPPORT; PSA COMPLETE +CLIPS TRK2	
0S29	0D5606							SUPPORT; COMPLETE TR2S	